



# Dimmer Monitor

---

Release Notes

Version 2.2

**Compulite Systems (2000) Ltd.**

9 Hanagar St. Neve Ne'eman B Industrial Zone Hod Hasharon, 45421, Israel  
Tel: 972 9 744 6555 ~ Fax: 972 9 746 6515 ~ [www.Compulite.com](http://www.Compulite.com)

Copyright © 2012 Compulite Systems (2000) Ltd. All rights reserved.

This guide is delivered subject to the following conditions and restrictions:

This product or document is protected by copyright and distributed under licenses restricting its use, copying, distribution and decompilation. No part of this product or document may be reproduced in any form by any means without the prior express written authorization of Compulite Systems (2000) Ltd. and its licensors (if any). Information contained herein is subject to change without notice.

## Release Notes and Installation Guide

This new version of the Dimmer Monitor (DM) software is mainly a support version. No changes were made to the functions.

The new version contains the following support features:

- New dongle driver support.

The old dongle is no longer supported. Please install the new driver on the target machine. (See install procedure below)

- Windows 7 support.

Windows 7 does not include Visual Basic 5 runtime files which need to be installed in order to run the Dimmer Monitor. Please install VB5 runtime in order to run the Dimmer Monitor on Windows 7. (See install procedure below)

### To install

1. Unzip the new software version.

The root folder is named "DimmMon Setup".

2. Install the new dongle driver from ,  
"\Support\Sentinel\_LDK\_Runtime\_setup"

3. Plug the dongle into the USB port.

Make sure that the PC recognizes the new Hardware and install the necessary files. (This should be automatic)

4. Install the VB5 runtime from, "\Support\Msvbvm50.exe".

Note: This is only for Windows 7, NOT for Windows XP or earlier.

5. Install the Dimmer Monitor software by clicking on "Setup.exe".