



**Compulite Systems (2000) Ltd.**

---

## **Dlite Software Upgrade instructions (June 2007)**

These are instructions on how to upgrade your Dlite software.

Please read the release notes carefully to learn about the new features and bug fixes.

If you encounter difficulties or have any questions, do not hesitate to contact us directly or via e-mail at: [support@compulite.com](mailto:support@compulite.com)

**Important:** Before upgrading your software, Please make sure that the OS image version is 3.4. In order to check the Version on your Dlite do the following:

1. Press SETUP and tap "*System Options*" on the touch screen.
2. Verify the following software version: OS Image 3.4

\*If the O/S version do not match the above version please download from the Compulite web site under the Downloads section->Dlite the file named, *Dlite\_OS\_3.4\_update.zip*. Upgrade the O/S according to the instructions in it and then proceed with upgrading the software and Panel.

### **SW Upgrade Instructions:**

1. Download **Software v10.5R1** file from the Downloads section on Compulite web site (the file already contains the Panel 7.1 version).
2. Insert an empty floppy disk into the floppy drive of your PC.
3. Run the **Dlite 10.5R1.exe**. The SW and the Panel files will be written onto the floppy disk.
4. When the process is done, remove the diskette from the PC floppy drive.
5. On the Dlite press the **SETUP** key and tap *System Options*.
6. Tap *SW Upgrade* on the LCD touch screen.
7. When prompted, insert the floppy disk into the floppy drive and tap *O.K.*
8. Wait for the message: *upgrade successful!!!* On the LCD panel.
9. Dlite SW is now upgraded.
10. Verify the new software version (*10.5R\_1*) by pressing the **SETUP** key and tap *System Options*.

\* Check your Panel version by pressing **SETUP** key and tapping *System Options*. If the Panel version is not 7.1, please keep the floppy in the floppy drive and follow the instructions below:

### **Panel upgrade instructions:**

1. On the Dlite press the **SETUP** key and tap *System Options*. (Make sure that the floppy is in the floppy drive).
2. Tap *Panel Upgrade* on the LCD touch screen.
3. When prompted, you will see the message: "please restart the system for the changes to take effect. While starting up press and hold wheels 1 and 3". Now tap *O.K.*

---

9 Hanagar Street, Neve Ne'eman B Industrial Zone, Hod-Hashron, Israel

[www.compulite.com](http://www.compulite.com)

[support@compulite.com](mailto:support@compulite.com)



## **Compulite Systems (2000) Ltd.**

---

4. Turn off the system.
5. Press and hold wheels 1 and 3 and Turn on the system. (On the 7 segments you will see -panel-).
6. Wait for the message: *successful!!!* On the LCD.
7. Now turn off system again.
8. Turn on the system without pressing or holding anything.
9. Dlite Panel version is now upgraded.
10. Verify the new Panel version (*7.1*) by pressing the SETUP key and tap *System Options*.

Now your Dlite is ready with the new SW, PANEL and O\S !

---

9 Hanagar Street, Neve Ne'eman B Industrial Zone, Hod-Hashron, Israel

[www.compulite.com](http://www.compulite.com)

[support@compulite.com](mailto:support@compulite.com)