



Compulite Systems (2000) Ltd.

Dlite Software Upgrade instructions (March 2008)

These are instructions on how to upgrade your Dlite software.

Please read the release notes carefully to learn about the new features and bug fixes.

If you encounter difficulties or have any questions, do not hesitate to contact us directly or via e-mail at: support@compulite.com

Important: Before upgrading your software, Please make sure that the Panel version is 7.2 and OS image version is 3.4.

In order to check the Version on your Dlite do the following:

1. Press SETUP and tap "*System Options*" on the touch screen.
2. Verify the following software versions:
 - a. Panel 7.2
 - b. OS Image 3.4

*If the Panel or the O/S versions do not match the above versions please download from the Compulite web site under the Downloads section->Dlite the file named, *Dlite_Panel_7.2_OS_3.4_update.zip*. Upgrade the Panel & O/S according to the instructions in it and then proceed with upgrading the software.

SW Upgrade Instructions:

1. Download **Software v10.6R1** file from the Downloads section on Compulite web site.
2. Insert an empty floppy disk into the floppy drive of your PC.
3. Run the **Dlite 10.6R1.exe**. The SW will be written onto the floppy disk.
4. When the process is done, remove the diskette from the PC floppy drive.
5. On the Dlite press the *SETUP* key and tap *System Options*.
6. Tap *SW Upgrade* on the LCD touch screen.
7. When prompted, insert the floppy disk into the floppy drive and tap *O.K.*
8. Wait for the message: *upgrade successful!!!* On the LCD panel.
9. Dlite SW is now upgraded.
10. Verify the new software version by pressing the *SETUP* key and tap *System Options*.
11. Verify the following software versions: *SW: 10.6R_1*

Now your Dlite is ready with the new SW!

9 Hanagar Street, Neve Ne'eman B Industrial Zone, Hod-Hashron, Israel

www.compulite.com

support@compulite.com