



Compulite Systems (2000) Ltd.

Rave Software Upgrade instructions (August 2007)

These are instructions on how to upgrade your Rave software.

Please read the release notes carefully to learn about the new features and bug fixes.

If you encounter difficulties or have any questions, do not hesitate to contact us directly or via E-mail at: support@compulite.com

Important: Before upgrading your software, Please make sure that the Panel version Is 1.42 and OS image version is 2.2 on a monitor Rave and 1.2 on a non-monitor Rave. In order to check the Version on your Rave, do the following:

1. Press SETUP and tap "*System Options*" on the touch screen.
2. Verify the following software versions:
 - a. Panel 1.42
 - b. O/S Image 2.2 (if monitor Rave) or 1.2 (if non-monitor Rave).

**If the Panel or the O/S versions do not match the above versions please download from the Compulite web site under the Downloads section-> Rave.*

NOTE- please look carefully on your RAVE and install the correct SW !

There are 2 ways to update your Rave:

1st Way (Difference for Monitor and Non-Monitor Rave):

Monitor RAVE SW Upgrade Instructions:

- **If you have a monitor Rave please follow the steps below:**
 1. Download "**Rave monitor ver 2.3R3M.zip**" file from the Downloads section on Compulite web site.
 2. Insert an empty floppy disk into the floppy drive of your PC.
 3. Unzip the zip file to your floppy drive.
 4. When the process is done, remove the diskette from the PC floppy drive.
 5. On the Rave press the **SETUP** key and tap **System Options**.
 6. Tap **SW Upgrade** on the LCD touch screen.
 7. When prompted, insert the floppy disk into the floppy drive and tap **O.K.**
 8. Wait for the message: **upgrade successful!!!** On the LCD panel.
 9. When you see that message, please turn off the system and then turn it on.
 10. Rave SW is now upgraded.
 11. Verify the new software version by pressing the **SETUP** key and tap **System Options**.
 12. Verify the following software versions: **SW: M2.3R3**

9 Hanagar Street, Neve Ne'eman B Industrial Zone, Hod-Hashron, Israel

www.compulite.com

support@compulite.com



Compulite Systems (2000) Ltd.

Non-Monitor RAVE SW Upgrade Instructions:

- **If you have a non-monitor Rave please follow the steps below:**

13. Download "**Rave non monitor ver 2.3R3.zip**" file from the Downloads section on Compulite web site.
14. Insert an empty floppy disk into the floppy drive of your PC.
15. Unzip the zip file to your floppy drive.
16. When the process is done, remove the diskette from the PC floppy drive.
17. On the Rave press the **SETUP** key and tap **System Options**.
18. Tap **SW Upgrade** on the LCD touch screen.
19. When prompted, insert the floppy disk into the floppy drive and tap *O.K.*
20. Wait for the message: **upgrade successful!!!** On the LCD panel.
21. When you see that message, please turn off the system and then turn it on.
22. Rave SW is now upgraded.
23. Verify the new software version by pressing the **SETUP** key and tap **System Options**.
Verify the following software versions: **SW: 2.3R3**

If this operation will fail then try the 2nd Way (For both Monitor and Non-Monitor Rave):

1. Download the correct SW version for your Rave ("**Rave monitor ver 2.3R3M.zip**" if you have a monitor Rave or "**Rave non monitor ver 2.3R3.zip**" if you have a Non-monitor Rave) from the Downloads section on Compulite web site.
2. Insert an empty floppy disk into the floppy drive of your PC.
3. Unzip the zip file to your floppy drive.
4. When the process is done, remove the diskette from the PC floppy drive and insert it to the Rave console.
5. Turn off the Rave.
6. Connect an external PS2 keyboard.
7. Press and hold the "**L**" button on the keyboard and turn on the Rave console.
8. System is now updating your console (you can now release the "**L**" button).
9. When finish you can verify the new software version by pressing the **SETUP** key and tap **System Options**.
10. Verify the following software versions: **SW: M2.3R3**

Now your Rave is ready with the new SW!