

Rave USB Release Notes

Release Date	July 17, 2008
Software version	3.4R2
OS version	1.2
Panel version	1.42

ATTENTION! This software is for Rave USB systems only!



Version Highlights - New Features

1 Universal Serial Bus

- The floppy disk drive has been replaced by USB. There are two Universal Serial Buses on Rave's front panel and one on the back panel.
- Support for an external keyboard and mouse on USB.

2 Autosave

- Your show is automatically saved every 10 minutes, if **STORE**, **UPDATE**, or **ENTER** has been pressed.
- The autosave file is show 120.
- Use the usual load procedure to load show 120.
- Each time a show is loaded, the current show 120 file (from autosave) is overwritten.

3 Screen resolution

Screen resolution has been upgraded to 1024 x 768.

Limitations

1. The USB stick interferes with Rave's start up! Make sure the USB stick is not plugged in before starting up Rave.
2. An external USB hub requires an external power supply.
3. When loading information to a USB stick, it is required to place shows in a folder named 'Shows' and devices in a folder named 'Devices'. If you do not use these exact folder names, Rave will not recognize the files.

Copyright © 2003 Compulite Systems (2000) Ltd. All rights reserved.

This documentation is delivered subject to the following conditions and restrictions:

This document is protected by copyright and distributed under licenses restricting its use, copying, distribution and decompilation. No part of this product or document may be reproduced in any form by any means without the prior express written authorization of Compulite Systems (2000) Ltd. and its licensors (if any). The content of this document is furnished for informational use only and is subject to change without notice. Compulite Systems (2000) Ltd. assumes no responsibility or liability for errors or inaccuracies that may appear in this book.

Rave Release Notes software version 3.0R1

July 2008

