



Rave USB

Compulite Systems (2000) Ltd.

Rave USB Version 3.4R2




Software Upgrade instructions

These are instructions on how to upgrade your Rave software to the new version "3.4R2".

Important:

- This installation file is for Rave consoles with a **USB port ONLY!** Rave consoles with a floppy drive will stop functioning if you attempt to install this version.
For Rave floppy consoles please download the Rave floppy software version from our web site.
- Please backup your current show on the Rave Console.

Requirements:

- External screen 
- USB mouse 
- USB stick 



Rave USB

Compulite Systems (2000) Ltd.

Rave USB Version 3.4R2

SW Upgrade Instructions:

- A. Connect a USB stick to the PC in which this folder was extracted to with minimum 10 MB of free space.
- B. Copy the "RaveVGA.exe" file to the ROOT dir of the USB stick.
 - The files can not be inside a folder on the USB stick, otherwise the Rave will not be able to recognize them in the SW upgrade procedure.
- C. Disconnect the USB stick from your PC
- D. Connect the external monitor to the console
- E. Connect the USB stick to the console
- F. Press **[SETUP, SYSTEM OPTIONS, SW UPGRADE, OK]**
- G. Wait for the Sw upgrade to complete.
- H. Go back to the "system options" menu and verify that the SW version number is updated.
- I. Rave USB Console software upgrade is complete.