



Rave Version 2.3 R2/M2.3R2

Rave – SW Version 2.3R2/M2.3R2 **Installation Instructions and Release Notes**

PLEASE READ THESE INSTRUCTIONS CAREFULLY.
IF YOU NEED ASSISTANCE, CONTACT THE SUPPORT TEAM:
support@compulite.com.

1. Preparing the SW update disk.

- 1.1. Download the appropriate SW package:
For non-monitor console: **Rave 2.3R2.exe**
For monitor console: **Rave M2.3R2.exe**
- 1.2. Insert an empty floppy disk into the floppy drive.
- 1.3. Run the '.exe' file.
The SW will be written onto the floppy disk.

2. Updating the SW version.

- 2.1. Connect a PS/2 keyboard to the console.
- 2.2. Insert the SW update disk into Rave's floppy drive.
- 2.3. Press and hold "L" on the external keyboard and start the console.
- 2.4. You'll see the following messages on the LCD:
 - 2.4.1. "Loading files, please wait..." (this will take approximately 30 seconds).
 - 2.4.2. "Loading Rave. Please wait..." (this will take approximately 20 seconds).
- 2.5. After the application has loaded, press 'Setup, System Settings (F7)' and verify that the Core SW version is 2.3R2.

3. Fixed Bugs.

- 3.1. PB # 1 assignment was not saved in Warm Data.

Compulite Systems, 9 Hanagar Street, Neve-Ne'eman B Industrial Zone, Hod Hasharon 45421 Israel
POB 7180 Tel: 972 9 7446555 Fax: 972 9 7446515
www.compulite.com