



Rave USB

Compulite Systems (2000) Ltd.

Version 3.4.R3

Software Upgrade instructions

These are instructions on how to upgrade your Rave software to the new version "**3.4.R3**".

Important:

- In order for the console to work properly after installing this version you **Must** also upgrade the panel version to **1.45**
the new panel version is available for download from our web site.
- This installation file is for Rave console with a **USB port ONLY!** Rave console with a floppy drive will stop functioning if you attempt to install this version.
For Rave floppy consoles please download the Rave floppy software version from our web site.
- Please backup your shows on the Console before proceeding.

Requirements:

-  External screen
-  USB stick


9 Hanagar Street, Neve Ne'eman B Industrial Zone, Hod-Hashron, Israel

www.compulite.com

support@compulite.com

Software Upgrade Instructions:

- Extract the zip file of the new version,
- Connect a USB stick to the PC in which this folder was extracted to with minimum 10 MB of free space.
- From the extracted folder copy the files to the ROOT dir of the USB stick.
(**Without a folder**)

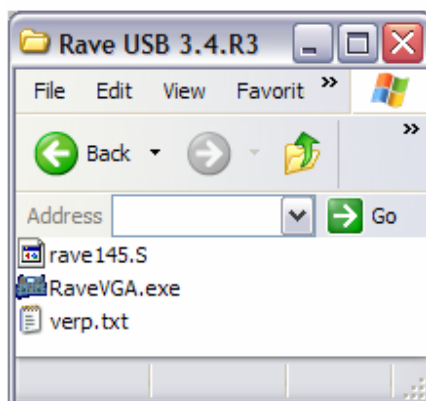

- The files **can not be inside a folder** on the USB stick, otherwise the Rave will not be able to recognize them in the Software upgrade procedure.
- Disconnect the USB stick from your PC
- Turn ON the Console,
- Connect an external monitor to the console
- Connect the USB stick to the console
- Press **[SETUP, SYSTEM OPTIONS, SW UPGRD, OK]**
- The small LCD screen will prompt "Upgrading software, please wait..."
- After the installation is completed, the console will exit the "System Options" menu.
- Disconnect the USB stick from the console,
- Go back to the "system options" menu and verify that the SW version number is updated to "**3.4.R3**".
- Rave software upgrade is completed.
- Please upgrade the panel version to version **1.45**



Panel Upgrade Instructions:

- The new panel files are already on your USB stick, simply press **[SETUP, SYSTEM OPTIONS, PANEL UPGRD, OK]**
- Wait for the Panel upgrade to complete, the small LCD touch screen will prompt to restart the console.
- Disconnect the USB stick from the console and then turn OFF the console power,
- wait for 1 minute and turn the console power ON again.
- After the console software is running, it will automatically upgrade the panel version.
- When this is done you will be prompt "Successful" on the small LCD screen,
- Once again, Turn OFF the console,
- wait for 1 minute and turn the console power ON again.
- After the console software is running, re enter the "System options" menu to verify that the new version number is updated to "**1.45**".

Installation completed.